



SHERPA SADDLE BAG JL


USE OF THE DEAD SPACE OVER THE FENDERS

INSTALLATION INSTRUCTIONS



Attach the included zipper strip to the hardtop bolt holes on the top edge of the tub. If the Jeep does not have a hardtop but does have the factory captive nuts for the hardtop under the tub rail, use 8mm x 1.25 x 20mm long screws (not supplied) to attach the zipper strips. If the Jeep does not have the factory captive nuts, 3/4"-long 5/16 screws and nuts or 20mm-long 8mm screws and nuts (not supplied) can be used to attach the zipper strips.

If the Jeep is equipped with a soft top: Refer to the owner's manual section on Door Frame Removal. Remove the frames, lay the zipper strip on the top of the body and replace the door frame, inserting the door frame pin through the second hole in the front of the zipper strip. Once the door frame is replaced, the rear hole in the zipper strip is secured in the hole which is used to secure the hardtop.

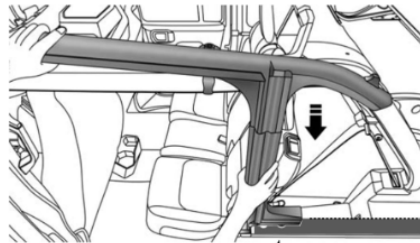

The door frame pin goes through the second hole in the front of the zipper strip.



JLU 4 Door

Like your favorite pair of jeans, perfectly fitted fabric products may be a bit tight when they're new and like your jeans after a little use they'll stretch to that perfectly comfy fit you love so much. The initial fit of Saddlebag zipper strip is designed to be very tight for the same reason. When installing the strip to the Jeep tub, pull it tight to stretch it so the grommets line up with the holes in the tub/hardtop. This is normal and will ensure a good fit over time.



SHERPA SADDLE BAG JL


USE OF THE DEAD SPACE OVER THE FENDERS

INSTALLATION INSTRUCTIONS



Attach the included zipper strip to the hardtop bolt holes on the top edge of the tub. If the Jeep does not have a hardtop but does have the factory captive nuts for the hardtop under the tub rail, use 8mm x 1.25 x 20mm long screws (not supplied) to attach the zipper strips. If the Jeep does not have the factory captive nuts, 3/4"-long 5/16 screws and nuts or 20mm-long 8mm screws and nuts (not supplied) can be used to attach the zipper strips.

If the Jeep is equipped with a soft top: Refer to the owner's manual section on Door Frame Removal. Remove the frames, lay the zipper strip on the top of the body and replace the door frame, inserting the door frame pin through the second hole in the front of the zipper strip. Once the door frame is replaced, the rear hole in the zipper strip is secured in the hole which is used to secure the hardtop.

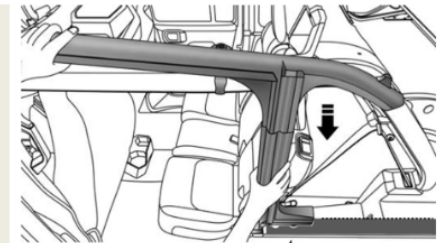

The door frame pin goes through the second hole in the front of the zipper strip.



JLU 4 Door

Like your favorite pair of jeans, perfectly fitted fabric products may be a bit tight when they're new and like your jeans after a little use they'll stretch to that perfectly comfy fit you love so much. The initial fit of Saddlebag zipper strip is designed to be very tight for the same reason. When installing the strip to the Jeep tub, pull it tight to stretch it so the grommets line up with the holes in the tub/hardtop. This is normal and will ensure a good fit over time.